





Well Site Guard Ltd.

Superior Well Head Protection Patent Pending


Rain Guard Installation

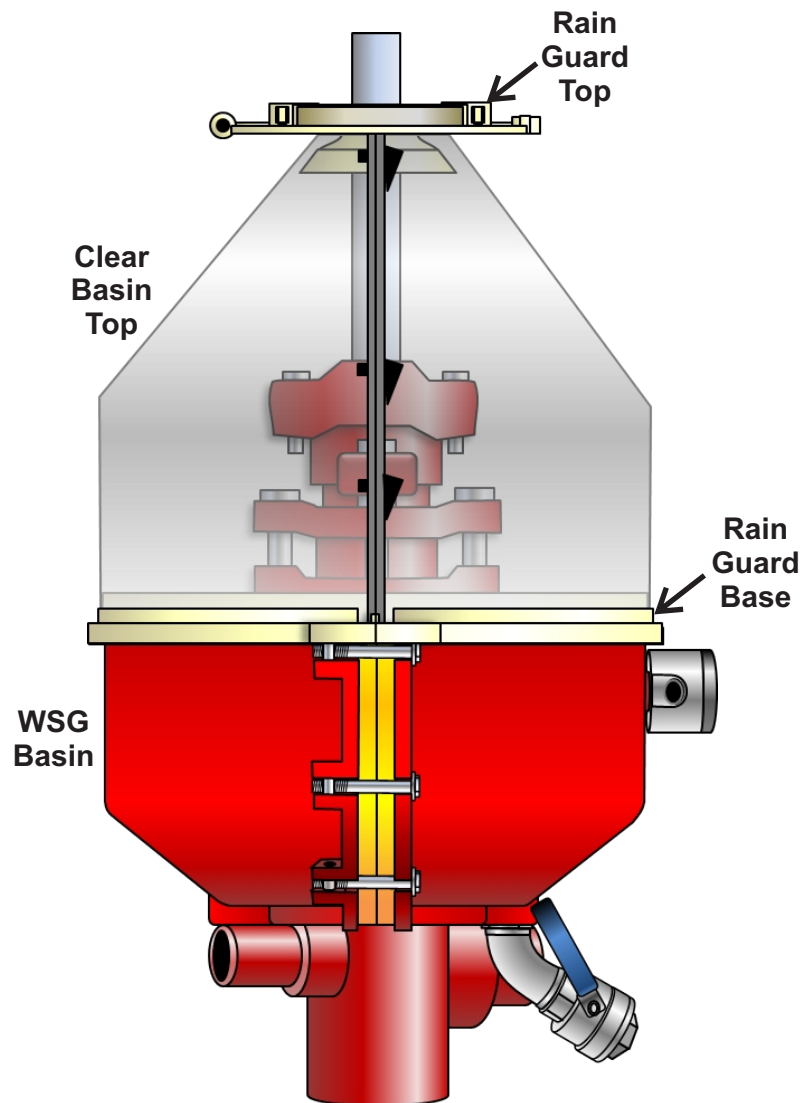


- 1** Unclip and remove Clear Basin Top.
- 2** Holding both sides together, line up and drop inner notches of the Rain Guard base over the WSG basin knobs; twist to secure.
Joined ends of the Rain Guard need to line up with the bolted joints of the WSG Basin.

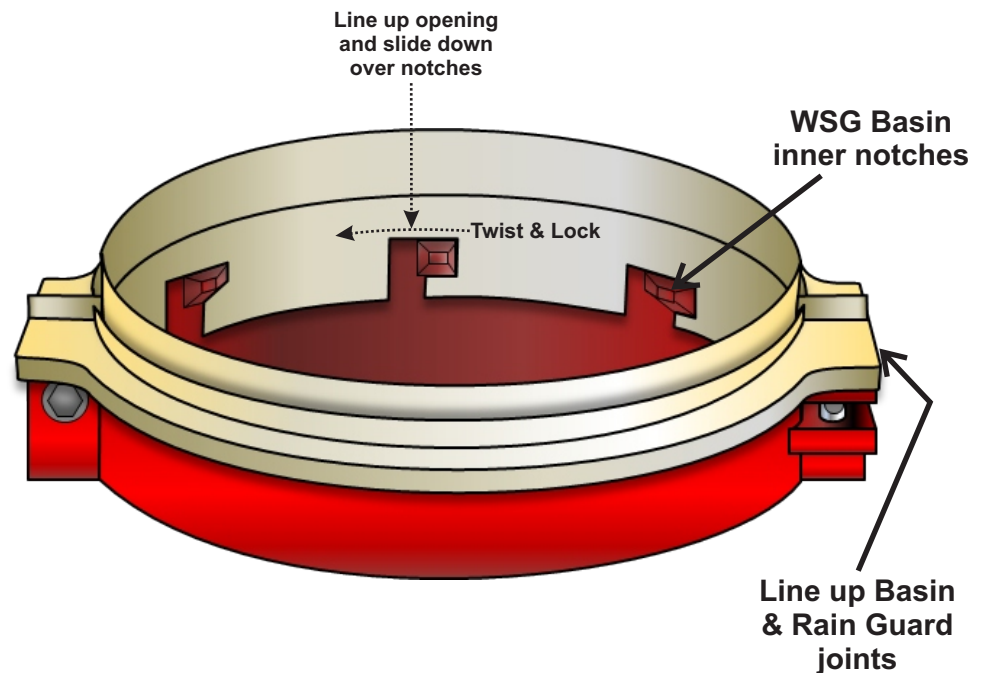


- 3** Insert appropriately sized felt insert into each side of the Rain Guard Top and clasp around the polished rod.

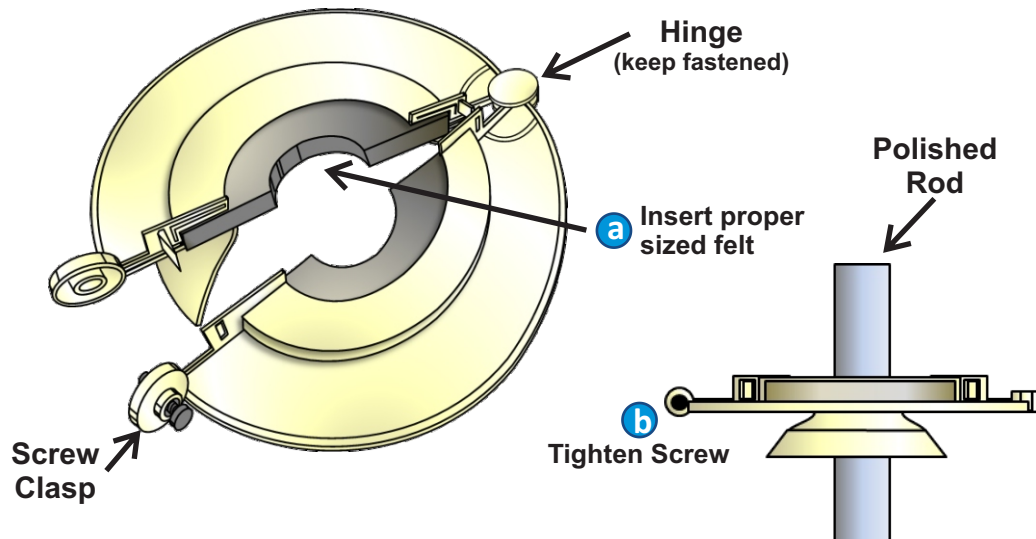

- 4** With Clear Basin Top's clips secured on ONE side, slide it into place on the underside of the Rain Guard Top. Secure the Clear Basin Top's clips on the other side.

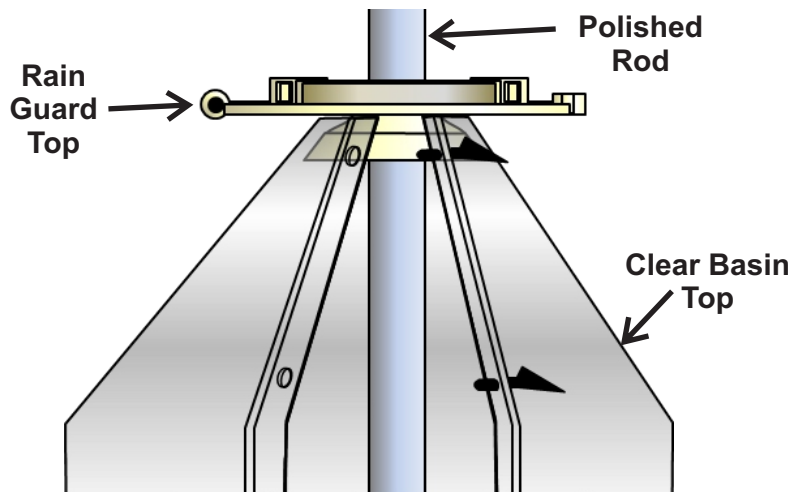

- 5** Drop joined Basin Top and Rain Guard Top into the slotted base.

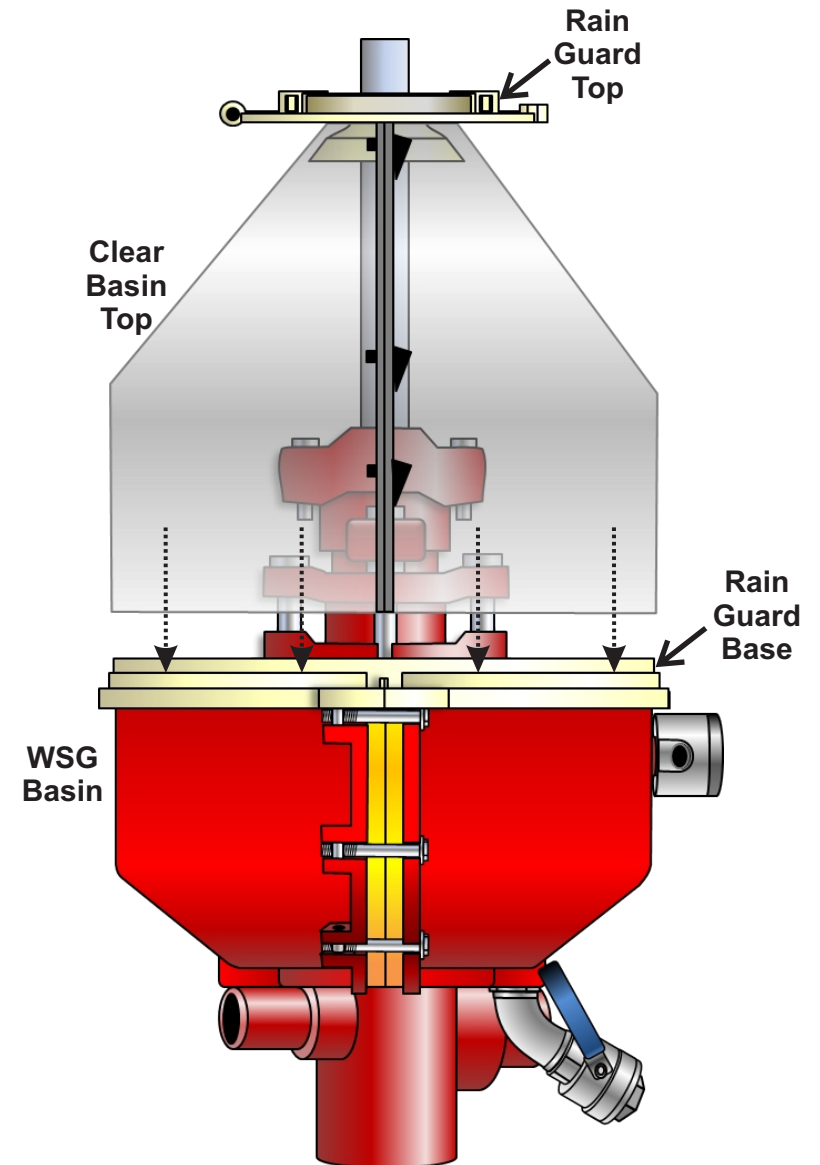

- 6** Re-secure attachment spring from base to clear top